


TA3PR/FL






KammBar

Instructions


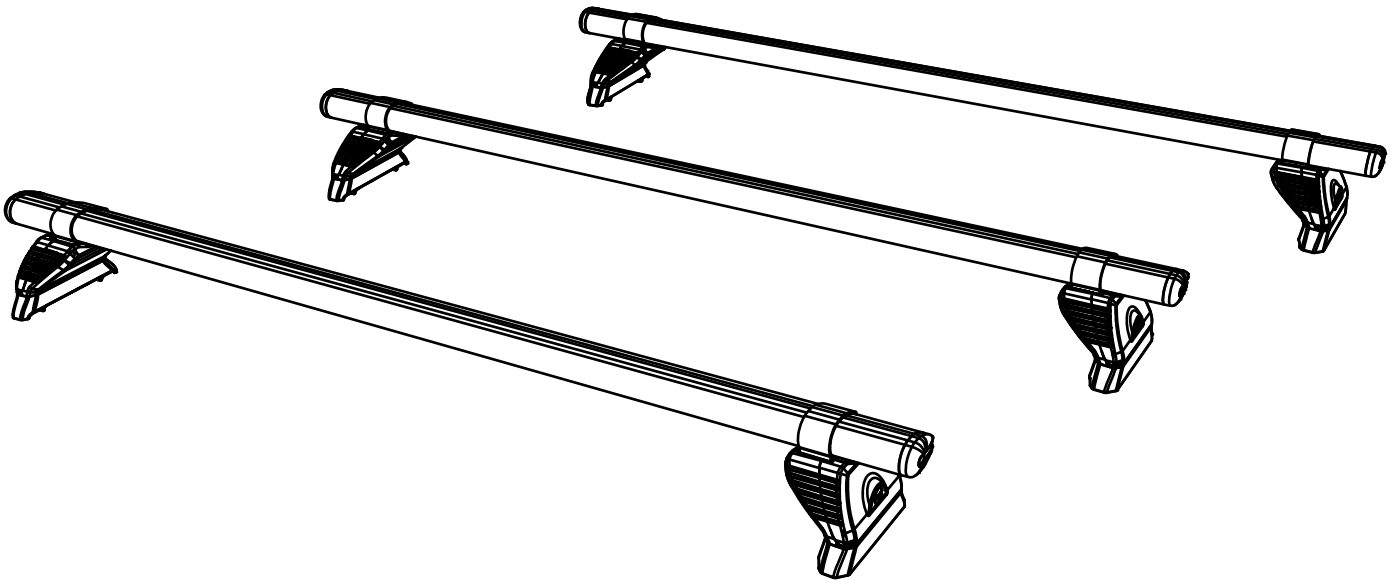


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

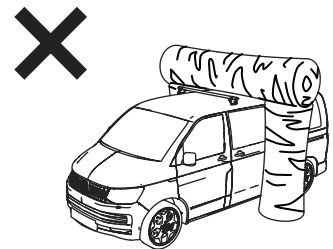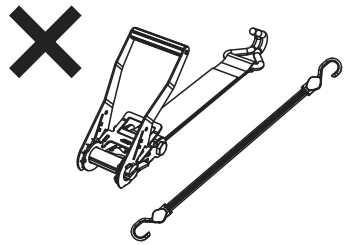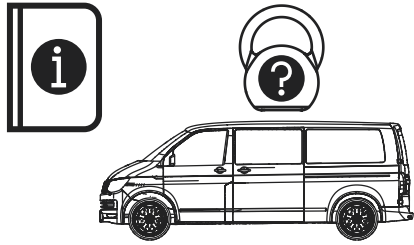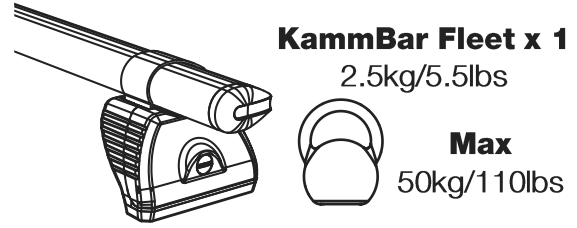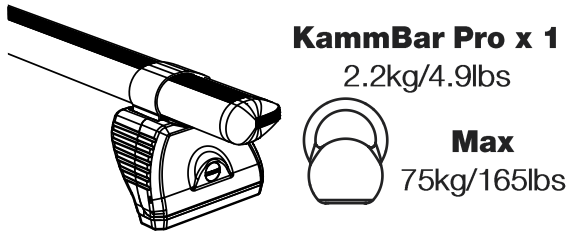




KammBar Pro

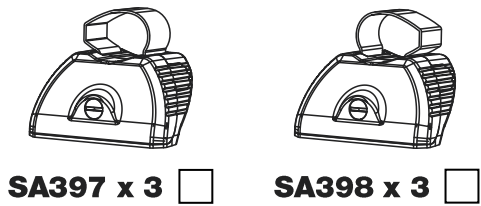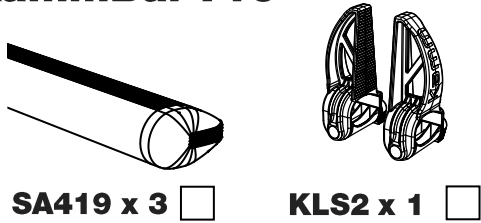


KammBar Fleet

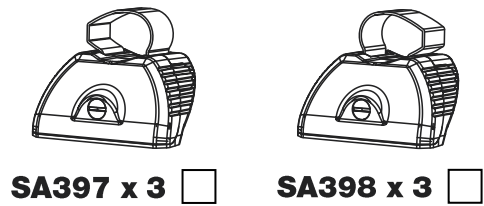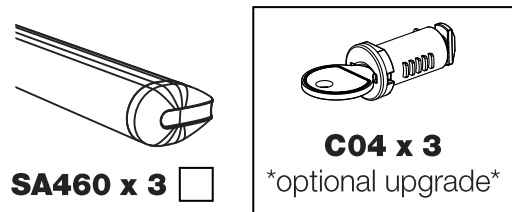


Fitting Kit

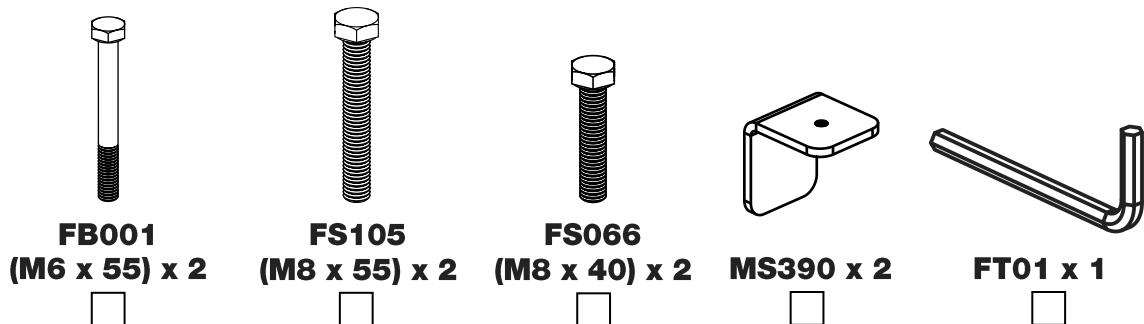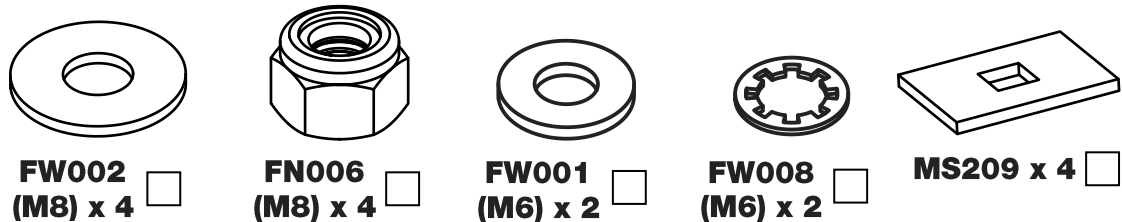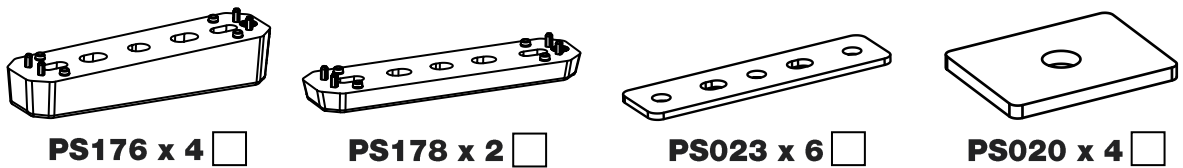


1.

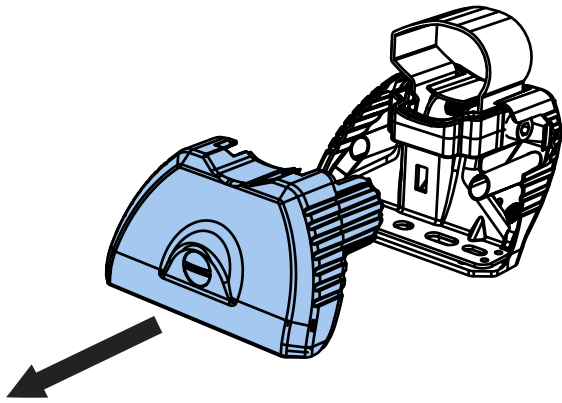

2.

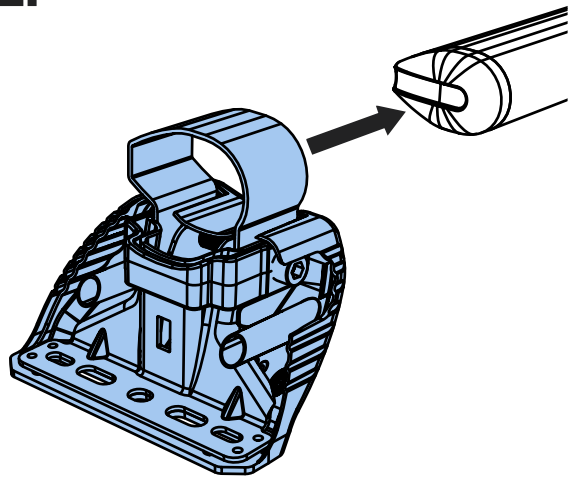


3.




SA397

PS176




SA397

PS178



SA397

PS176

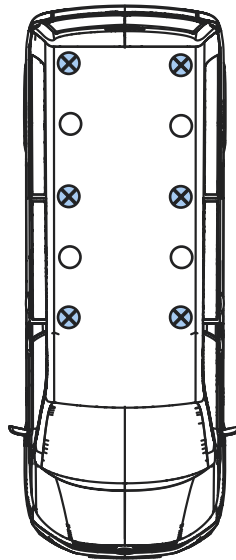


SA398



PS176




SA398



PS178






SA398



PS176



4.

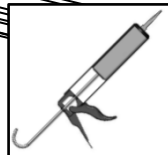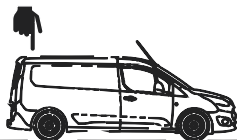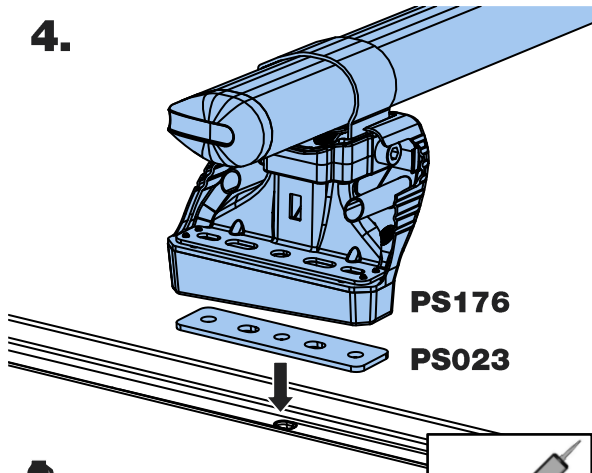

5.

